

WasteDataFlow Core Set Indicator - WMT005

WMT/005 - a) The total tonnage and b) the percentage of municipal waste used to recover heat and power.

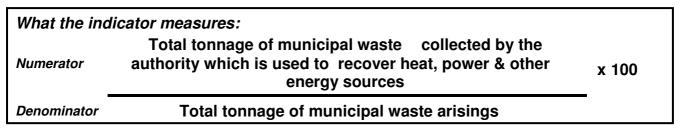

How the numerator and denominator are calculated using WasteDataFlow is summarised below setting out the questions data is drawn from. Do not exclude abandoned vehicles, rubble, beach cleansing and incinerator residues.

Numerator

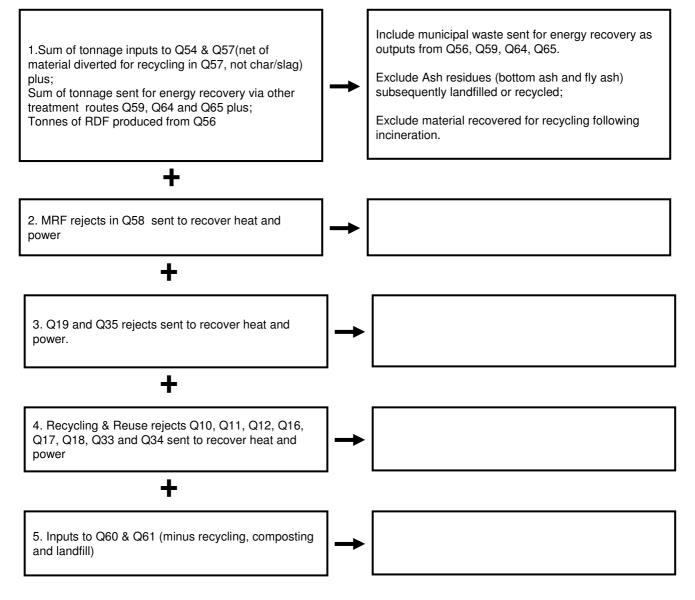

WasteDataFlow

Core Set Indicator - WMT005

WMT/005 - a) The total tonnage and b) the percentage of municipal waste used to recover heat and power.

What the indicator measures:		
Numerator	Total tonnage of municipal waste collected by the authority which is used to recover heat, power & other energy sources	x 100
Denominator	Total tonnage of municipal waste arisings	_

How the numerator and denominator are calculated using WasteDataFlow is summarised below setting out the questions data is drawn from. **Do not exclude abandoned vehicles, rubble, beach cleansing and incinerator residues.**

Denominator

